

Installation Instructions-Patio Door Lock

**Disassemble lock body**

Remove Steel Clips first

Steel Pin

Plastic Caps

The diagram illustrates the disassembly of the lock body. It shows a vertical steel pin being pulled out of the lock body. Two steel clips are shown being removed from the lock body. Two plastic caps are shown being removed from the lock body.

**Install & Reassemble Lock**

Use 5/32 drill two places to accept #10-32 sheet metal screws (provided).

1. Replace steel clips.  
2. Screw lock to door.  
3. Replace steel pin.  
4. Replace plastic caps.

The diagram illustrates the installation and reassembly of the lock. It shows a 5/32 drill being used to drill two holes in the door. The lock body is then attached to the door using two #10-32 sheet metal screws. The steel pin is replaced, and the plastic caps are reattached. A dimension line indicates a distance of 1.9710 between the two screws.

**EMTEK**  
ASSA ABLOY

IN4-PATIODOOR

REV. 03-12-09

Installation Instructions-Patio Door Lock

**Disassemble lock body**

Remove Steel Clips first

Steel Pin

Plastic Caps

The diagram illustrates the disassembly of the lock body. It shows a vertical steel pin being pulled out of the lock body. Two steel clips are shown being removed from the lock body. Two plastic caps are shown being removed from the lock body.

**Install & Reassemble Lock**

Use 5/32 drill two places to accept #10-32 sheet metal screws (provided).

1. Replace steel clips.  
2. Screw lock to door.  
3. Replace steel pin.  
4. Replace plastic caps.

The diagram illustrates the installation and reassembly of the lock. It shows a 5/32 drill being used to drill two holes in the door. The lock body is then attached to the door using two #10-32 sheet metal screws. The steel pin is replaced, and the plastic caps are reattached. A dimension line indicates a distance of 1.9710 between the two screws.

**EMTEK**  
ASSA ABLOY

IN4-PATIODOOR

REV. 03-12-09