


**Installation Guide - Square and Round Pocket Mortise Lock - Privacy**

**1. Thread Drive Bar Cylinder**

Use Cylinder Key to thread Drive Bar Cylinder clockwise on interior side of door.


Note: Drive Bar Socket must be in the 12 o' clock position as shown.

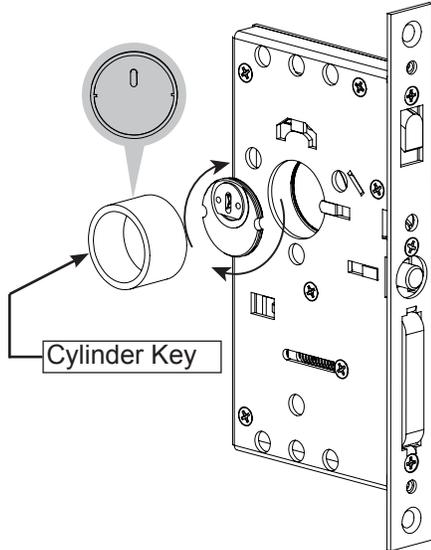

Cylinder Key

Note: Notches on cylinder must be parallel with the horizontal plane when fully screwed into lock body.

**2. Install Lock Body**

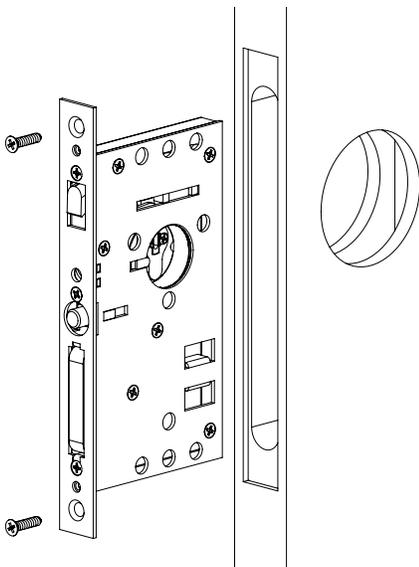


See template for door prep specifications

**3. Install Inside and Outside Plates**

Inside

Outside

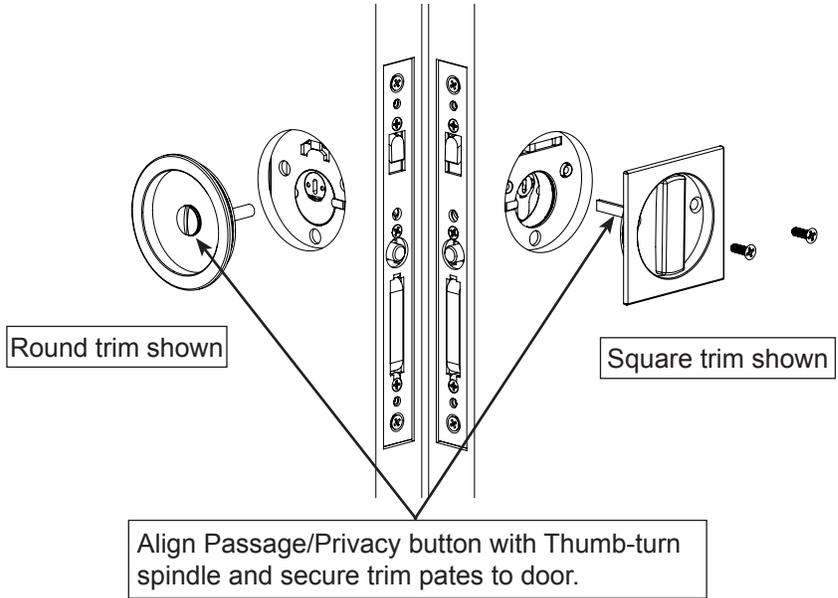


Round trim shown

Square trim shown

Align Passage/Privacy button with Thumb-turn spindle and secure trim plates to door.



**4. Tighten Key Cylinder**

Tighten locking screw to engage notches on cylinder

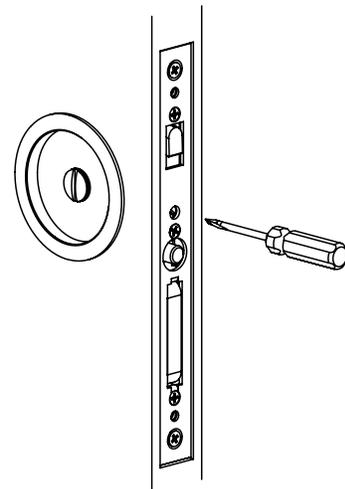

**5. Install Trim Plate**

**Door Jamb Prep.**

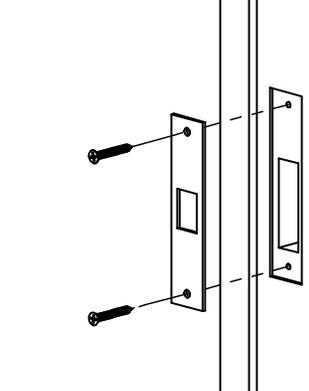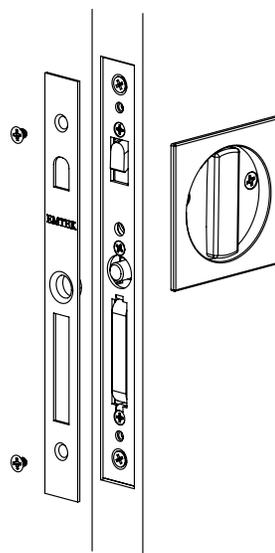

See template for door jamb prep specifications