
5439B SHOWER ROD INSTALLATION INSTRUCTIONS

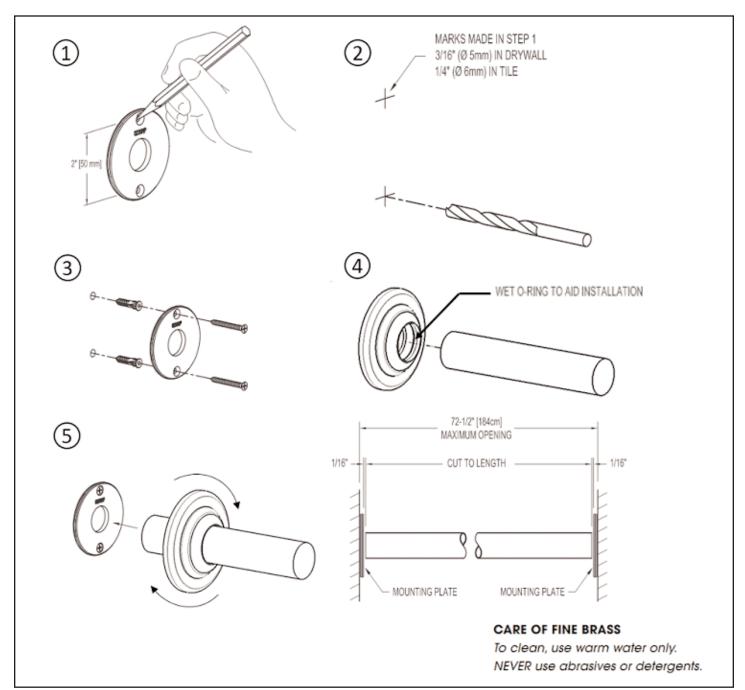



2001 CARNEGIE AVE, SANTA ANA CA 92705 (949) 417-5207 WWW.GINGERCO.COM