
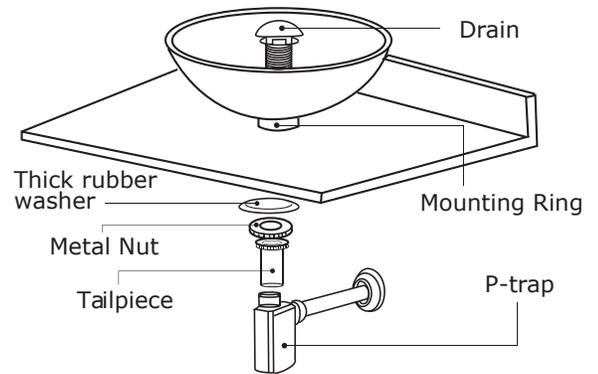
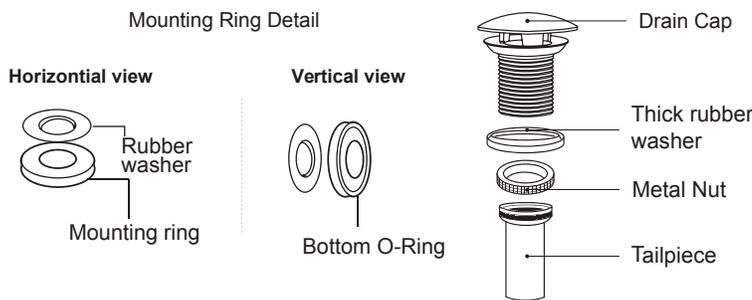


Model: 036918

Contempo Collection

Note : For installing above counter sink.
DO NOT USE any adhesives with silicone.
 Silicone will bond to the decorative finish and cause permanent damage.

Step 1 : Position and drill a 1-3/4" hole for the drain on the countertop. Place mounting ring under the sink as shown on the right

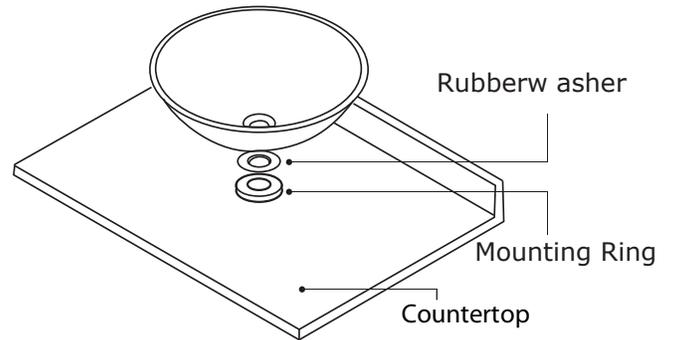


Step 2 : Drain assembly picture

Place a generous portion of plumbers' putty under drain cap and insert whole drain body inside the bowl and through the countertop

(There may be a small beveled rubber washer packaged with your drain, please discard this and use plumbers' putty instead)

Step 3 : From under the drain, insert the thick rubber washer and screw on and tighten the metal nut. Remove excess plumbers' putty and attach p-trap to tailpiece

Step 4 : Secure top & back splash to cabinet by using adhesive caulk

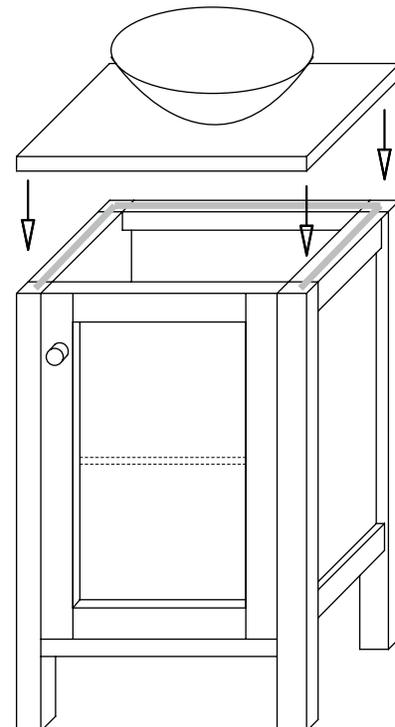


Note : For installing Ceramic Sinktop

Step 1 : Place adhesive around top of cabinet

See Figure 1.

Figure 1.

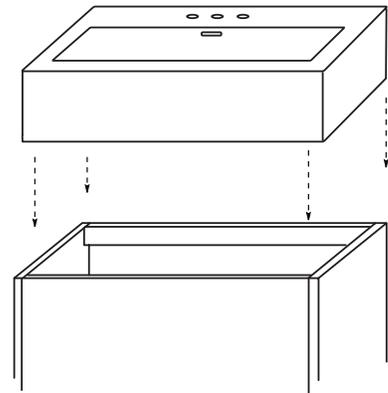


Step 3 : Place a generous portion of plumbers' putty under drain cap and insert whole drain body inside the bowl and through the countertop

(There may be a small beveled rubber washer packaged with your drain, please discard this and use plumbers' putty instead)

See Figure 2.


Figure 2.

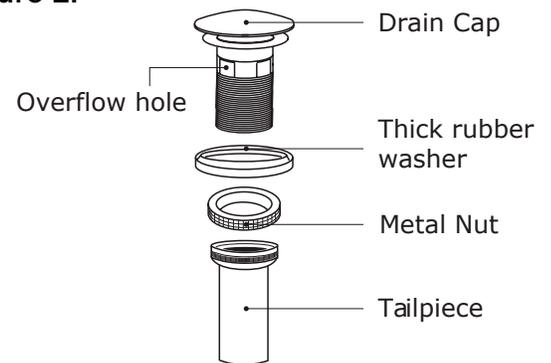

Step 4 : From under the drain, insert the thick rubber washer and screw on and tighten the metal nut. Remove excess plumbers' putty

See Figure 3.

Figure 3.

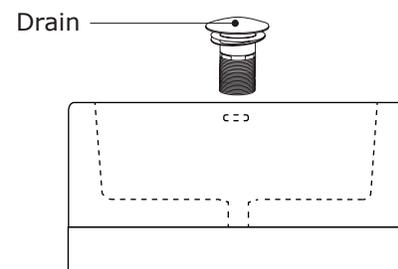

Step 5 : Attach p-trap to tailpiece

